

**CONTENTS OF YOUR
XTREME VERSION 9 PACKAGE**



OPTIONAL ITEMS





TABLE OF CONTENTS

I.	Contents of Your <i>Xtreme</i> Version 9 Package.....	2
II.	Taking Care of Your <i>Xtreme</i> Version 9.....	4
III.	Setting Up <i>Xtreme</i> Version 9 with Your Video/Audio System.....	5
IV.	Key Function Guide.....	7
	A) Basic Karaoke Control Functions.....	9
	1. Volume Control.....	9
	• Main Mic Volume.....	9
	• Music Volume.....	9
	• Sub-Mic Volume.....	10
	• Echo Volume.....	10
	2. Pause / Resume.....	10
	3. Song Selection.....	10
	• Random.....	10
	• Continuous Play.....	10
	• Select / Reserve	11
	4. Key	11
	• Pitch Control	11
	• Male / Female Voice Select	11
	• Octave Adjust	12
	5. Tempo	12
	6. Change Melody Instrument	12
	B) Record and Play Functions.....	13
	1. Recording	13
	2. Playback	13
	3. Delete Song (Using Main Mic)	13
	4. Delete Song (Using Duet Mic)	13
V.	C) Games.....	14
	1. Song Contest	14
	2. Othello Game	14
VI.	D) Configuration.....	15
VII.	Song Chip.....	17
VIII.	Songlist Binder.....	17
IX.	Wireless Sub-mic.....	18
X.	Troubleshooting Guide.....	19
XI.	Specifications.....	20
XII.	Technical Service Centers.....	21





POWER SUPPLY PRECAUTIONS:

1. Always make sure to remove batteries before connecting your V9 to its power adaptor. If two sources of power are used simultaneously, the batteries might leak and damage the microphone. *This will void the warranty.*
2. Use only the Adaptor supplied in your V9 package. If this is lost or damaged, replace only with an Adaptor supplied by The Astra Group, Inc. or by authorized *Xtreme* Magic Sing dealers. The plug of other adaptors may fit, but the electrical specifications may be different and therefore may damage the precise electronics of your V9 unit.
3. Always turn off the V9 before removing or adding song chips.
4. Turn off your V9 before unplugging the power adaptor.
5. Always remove batteries when not using the V9 microphone.

CLEANING AND HANDLING:

6. When cleaning, use a soft cloth. Dampen with water if needed. Never use alcohol or chemical solutions.
7. Do not drop your V9 or subject it to heavy impact.
8. Do not use sharp objects (e.g., long fingernails, ball pens) to press on the keypad.
9. Do not disassemble the microphone. *This will void the warranty.*



STORAGE:


10. Avoid storing in direct sunlight, in places with high temperature, or in moist areas.
11. When transporting your V9 in a vehicle, keep it with you in the air conditioned interior. If your unit was transported in the heated trunk of a vehicle, or was left in a car under the sun for some time, allow the microphone to cool off before using. This will prevent it from overheating while in operation.



SETTING UP XTREME VERSION 9 WITH YOUR VIDEO/AUDIO SYSTEM

1. Install your V9 and its attachments as shown in the following diagrams.

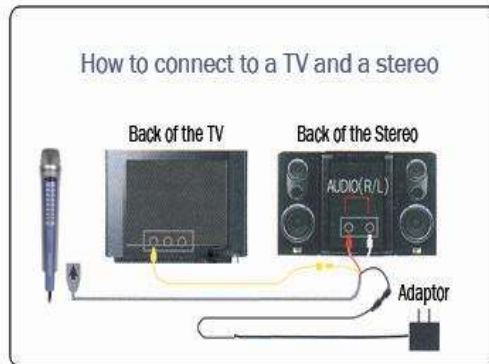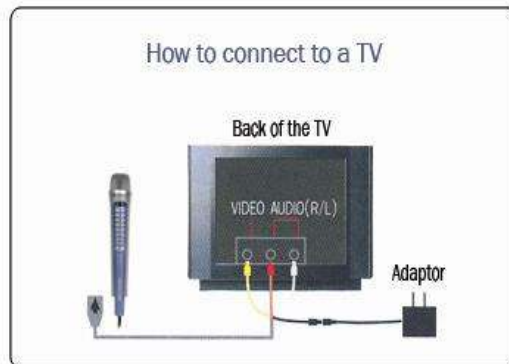

2. Switch on the TV and system. Put the TV in video mode.
3. Turn on your V9 by pressing .





Caution: Use only the adaptor supplied with your Version 9 package, or a Magic Sing adaptor supplied by The Astra Group, Inc. or an authorized *Xtreme* Magic Sing dealer. Using other adaptors can damage your mic even if they have a compatible plug.

Congratulations!


As owner of the
Xtreme Version 9,
you now have a highly useful,
practical and easy-to-use
handheld videoke microphone
for family entertainment,
fun activity with your friends,
or even singing alone
simply to have fun!

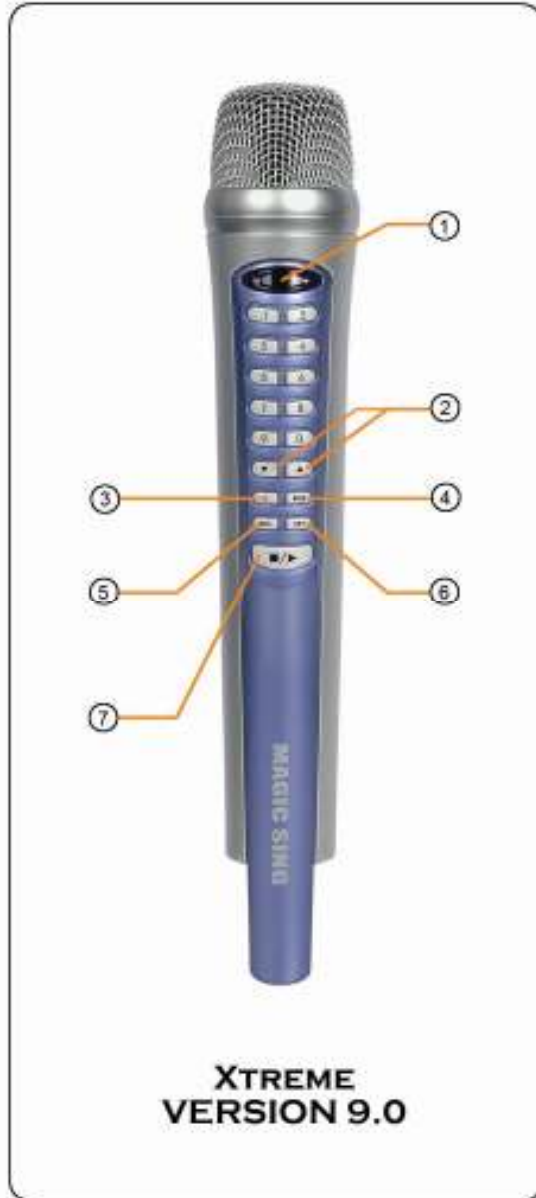


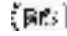 



1. 
 - Turns the power on or off.


2. Pilot LED light
 - Indicates if the power is on or off by emitting Light
 - Green light = Power is ON
 - No light = Power is OFF

3. 
 - Used to scroll through songs or other menus and options.

4. 
 - Used to access different menu functions

5. 
 - Used with other keys to turn sub-mic on or off, delete a recorded song, and change a background melody instrument.

 
 

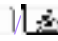 
6. 
 - Used to access pitch-related functions.

7. 
 - Stops / plays your recording or a selected song. Also used to replay pitch when practicing, or to select an option in the Configuration menu.



1) *Volume Control*

- Main Mic Volume

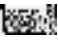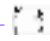Press  +  +  + 


To adjust mic volume over 15 steps







- Background Music Volume

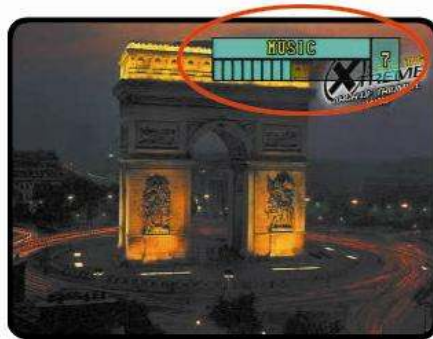Press  +  +  + 


To adjust volume of background music over 15 steps







• Sub-mic Volume

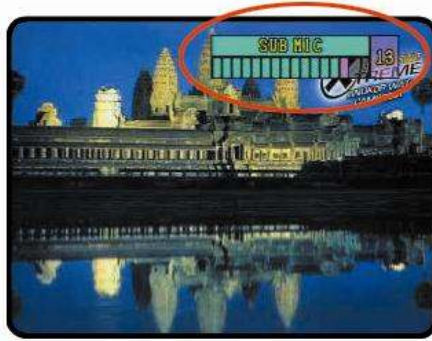Press  +  +  + 


To adjust volume of sub-mic over 15 steps



• Echo Volume

Press  +  +  + 

To adjust echo volume over 15 steps

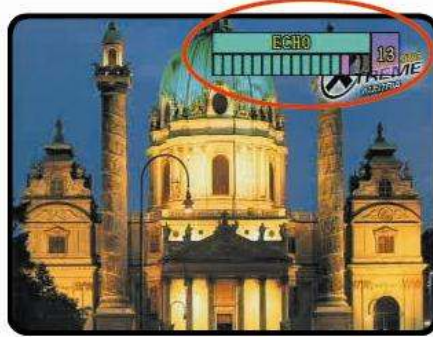

2) **Pause / Resume**

Press  + 

To pause or resume playback of selected song

3) **Song Selection**

• Random • Press  + 

Mic will randomly play songs

• Continuous Play • Press  + 

Mic will play songs in continuous sequence from lowest to highest number



- Select / Reserve

Press (Song No.) + +

Select songs to play in the sequence you like. Press song number, then + , then repeat for next song. The TV screen displays only 6 songs, but you can pre-select up to 20 songs to play in sequence.



4) Key

- Pitch Control

Press + +

To adjust the key or pitch over 15 steps



- Male/Female Voice Select

Press + + +

Press to shift from male to female voice or vice versa.

• Octave Adjust

Press + + + +

To adjust octave level down or up after selecting male/female voice. Once the right scale is reached, press to select and play. Press once more and to adjust octave again.

5) Tempo

Press + +

To increase / decrease tempo of songs



6) Change Melody Instrument

Press + +


Default instrument will change from piano to the next instrument, successively pressing will allow you to look for the preferred instrument until piano is again selected.

1) *Recording*

Press (Song No.) +  +  + 

To start recording the selected song

Press  to stop.

Press  again to resume recording.

2) *Playback*

Press  + 

To display onscreen the list of songs recorded

Press  |  to scroll to the song you want to play.

Press  to playback or stop.

3) *Delete Song (using Main Mic)*

Press 

Highlight (select) the song you want to delete then press



4) *Delete Song (using Duet Mic)*


Press 

Highlight (select) the song you want to delete then press



1) Song Contest

Press  +  + 

It's fun to play this game by dividing people into two teams. Each team selects three songs at random which they will sing by turns. The team which gets a higher score wins. To stop the game, just press the  button.



2) Othello Game

Press  +  + 

This is the famous Othello game, also known as the Reverse game. It is a two-player game (black and white) and is normally played on an 8x8 grid. To win, the player must occupy the board with more of his/her own color pieces than the opponent's. At the start of the game, the board has two pieces for each player placed diagonally on the center of the board.

- *Each player places a piece on the board starting with the player using the black pieces (the "human" player). A "valid" move is when you can turn at least one of your opponent's pieces into your colored piece. You can do this by terminating a continuous line by placing your own piece on the board. All the pieces in the line are then flipped to your color. The lines can be in any of the eight lateral and diagonal directions from the position you have chosen. If there is more than one such line of pieces, all of them are flipped to your color*

 


 
Basic Rules of the Game:


- 1) *The player with the black pieces goes first; the two players go alternately.*
- 2) *To make a move, you must be able to flip at least one of your opponent's pieces to your*

color by completing a line of pieces as described above.

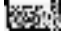

- 3) If you can make a valid move, you must make that move.
- 4) If you can't make any move, you must pass your turn and your opponent plays again.

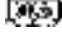CONFIGURATION

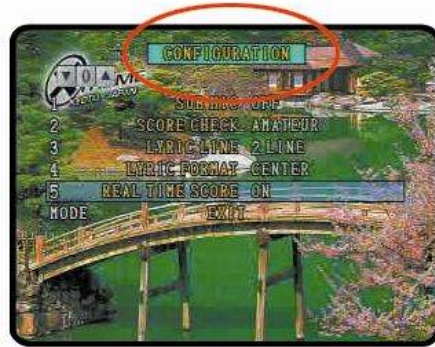Press  three times to enter the configuration menu. To select the options under each function, you can either use  /  to scroll up or down then press  to select, or simply press the corresponding number on the left.



SUB MIC (ON / OFF)

- This option turns the sub mic on or off. It is similar to pressing  and , which also turns the sub-mic on or off.

SCORE CHECK (AMATEUR / PROFESSIONAL / STAR SINGER / OFF)

- Use this function to select the level of your singing ability to match your score. “Amateur” is the easiest level, “Professional” is more challenging, and “Star Singer” is the most difficult. For example, if you choose “Star Singer,” it will be hardest for you to get

a high score if your singing skill does not qualify to be that of a star singer.

 LYRIC LINE (AUTO / 2 LINE / 3 LINE)

- This function allows you to select how many lyric lines to see on the TV screen during song playback.

 LYRIC FORMAT (CENTER / LEFT-RIGHT / MIX ALL)

- This function allows you to choose where lyric lines will be located on your TV screen.

 REAL TIME SCORE (ON / OFF)

- This function allows you to turn on or off the score display while singing.

 • Exit.



SONG CHIP



1. Turn off your Version 9 microphone.
2. Open the back cover.



3. Insert the chip firmly with the arrow pointing towards the head of the microphone.



4. Close the back cover and turn the power on.

5. Up to 4 song chips may be installed at a time.

SONGLIST BINDER


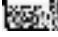 
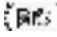 


1. Open the binder rings by pressing the metal tabs at the top and bottom of the binder.

 

2. Put in the new song list between the rings.

3. Close the binder rings.



1. The main mic should be turned off.
2. Take out the back cover of the main mic and put in the sub-mic receiving pack.
3. Turn on the main mic by pressing .
4. If you press  and , the TV screen will display “SUB-MIC ON.”
5. Open the back cover of the Sub-mic, insert two AA batteries as indicated and press the power button to turn it on. The green LED light will blink as a sign that the sub-mic is already on.
(Note: The batteries need to be replaced when a red LED light appears.)

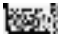

6. If you want to stop using the sub-mic, press  and . The TV screen will display “SUB-MIC OFF,” then it will stop functioning.

These buttons on the sub-microphone function similarly like those on the main microphone:

1. Arrow Down / Up  
2. Play/Stop 
3. Power 



1. *If your Version 9 doesn't power up*

- When you are using the power adaptor
 - Make sure that the adaptor is correctly plugged into the power outlet.
 - See to it that the male plug is appropriately inserted into the female plug.
- When you are using batteries
 - Make sure that two new AA batteries are in the compartment.
 - Check if the batteries are inserted in the correct direction.
 - Check the elasticity of the stainless steel in the battery compartment.
 - Make sure that the batteries are in good condition.

2. *If the user's voice is not heard on the microphone*

- Press the microphone button and check the volume.
- Check the condition of the batteries.

3. *If the TV does not show pictures or output sound*

- Make sure you have made the correct connections according to the correct colors.
- Check TV volume. If set too low, increase.
- Check if the TV is on video mode.
- Check the condition of the batteries.

4. *When the picture on the TV screen stays still and the mic won't turn off*

- Press  for 3 seconds or longer until the V9 turns off.

When uncertain about the unit's performance, turn off the power. While pressing 8 (for PAL TV system) or 9 (for NTSC), turn the power on. It will return to the original factory settings.





SPECIFICATIONS

- *Voice Frequency Range* : 200-1500 Hz
- *Battery* : 1.5V x 2 Alkaline
- *TV Channel* : Video Channel
- *Wattage* : 500 mA
- *Overflow (Under 10V)* : Built-in Protection
Circuit for Reverse Voltage
- *Dimension* : 48 x 45 x 260 mm
- *Weight* : 478g (including the cable)
- *Supply Voltage* : 8V DC
- *Resolution* : 720 x 480 (Interlaced)
- *Image Color* : True Color
- *Operating Temperature* : -20°C to 65°C
(-4°F to 149°F)





For your repair services, please contact one of the following technical centers.

PHILIPPINES

- ENTER INTERNATIONAL PHILIPPINES INC.
Peter Kim
Marketing Manager
Unit 1, Ground Floor, Building 2, Jannov Plaza
2295 Pasong Tamo Ext., Makati City
TEL: +63-2-848-5415/+63-2-891-0584
FAX: +63-2-891-0583
E-mail: eip@globelines.com.ph

U.S.A

- ENTER TECH ES2 TECH CORP
2642 GATES AVE. IRVINE CA 92606
TEL: +1-949-261-6500
FAX: +1-949-851-9900
E-mail: chris@enter-tech.com
- JOEUN ENTERPRISE
3361 West 1st. Street Suite 202 Los Angeles, CA 90004
TEL: +1-866-855-6386
E-mail: customerservice@joeunenterprises.com
- KOCONIX.COM
koConix.com
2642 Gates Ave. Irvine, CA 92614
TEL: +1-949-553-9416
Toll Free: +1-866-827-6632
E-mail: sales@koconix.com



EUROPE

- ENTER TECH, GERMANY OFFICE
Friday Kim
Marketing Manager
European Marketing Division
Korea Business Development Center (SBC)
Industriestrasse 34, D-65760 Eschborn, Germany
TEL: +49-6196-776822
FAX: +49-6196-779822
E-mail: friday@enter-tech.com

INDIA

- ENTER TECH, INDIA OFFICE
Charlie Shin
Marketing Manager
Flat No. 208 on 2nd floor in “C” wing of the
Building, Panchtantra 2, Yari Road, Versova,
Andheri (West), Mumbai 400 061, India
TEL: +91-22-5572-1976
+91-22-5572-1977
Mr. Ivor Fernandes +91-9892-305-991
Mr. Charlie Shin +91-9870-350-315
E-mail: shinfrog@dreamwiz.com
Charlie@enter-tech.com

SOUTH AMERICA

- NEKA
MANZANA 38, LOTES 5Y6, ZONA LIBRE
DE COLON
REPUBLIC DE PANAMA
TEL: +507-431-1754
E-mail: ykimpanama@yahoo.com

